


GPIO15	GPIO0	GPIO2	MODE
0V	0V	3.3v	Uart Bootloader
0V	3.3v	3.3v	Boot sketch
3.3v	X	X	SDIO mode (not used for Arduino)


(+0V pull) (+3.3v pull)

AUTO PROGRAM CIRCUIT			
DTR	RTS	RST	GPIO0
1	1	1	1
0	0	1	1
1	0	0	1
0	1	1	0

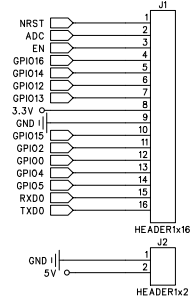

www.duckncat.com

ESP8266 socket 2in1

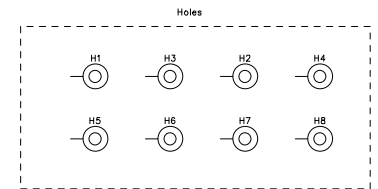

ESP-programmer V3		
CODE:	DNC-ESPP-2IN1-V3	REV: 3.05
SHEET: 1 OF 1	DATE: 2017-08-22	